

# **Mbsm.pro , Testeur de câble , camera (bnc connector) , USB, Rg45 , Rg11, Port 1394 , Produit tester, par mbsmgroup**

written by Lilianne | 19 February 2018

Mbsm.pro , Testeur de câble , camera (bnc connector) , USB,  
Rg45 , Rg11, Port 1394 , Produit tester, par mbsmgroup



## **5 in 1 Cable Tester**

### **TO TEST JUMPER CABLES:**

Plug cable into appropriate jack on the Master Unit and Remote  
Press TEST button and observe LEDs on Master Unit to find faults

### **TO TEST INSTALLED CABLES:**

Plug cable into appropriate jack on the Master Unit. Locate other  
end of cable and plug into appropriate jack on Remote.  
Press TEST button and observe LEDs on Master Unit to find faults

The 5 in 1 checks for Cable Continuity,  
Miswiring, Opens, Shorts, Crossover and Grounding.

Maximum Cable Length = 600 Feet (RJ-45/RJ-11/BNC)

Refer to manual for complete instructions.

**CAUTION:** Do not connect to a live circuit.  
Do not test more than one cable simultaneously





### Cable Tester

Indicator	1	2	3	4	5	6	7	8
RJ-45	●	●	●	●	●	●	●	●
RJ-11	●	●	●	●	●	●	●	●
1394	●	●	●	●	●	●	●	●
USB	●	●	●	●	●	●	●	●
BNC	●	●	●	●	●	●	●	●

5 in 1 Cable Tester  
Remote Unit







Remote Unit

5 in 1 Cable Tester

Cable Tester

Indicators: Power, Connected, Short, Low Battery, USB, BNC

	RJ-45	RJ-11	1394	USB	BNC
SIG 1	●	●	●	●	●
2	●	●	●	●	●
3	●	●	●	●	●
4	●	●	●	●	●
5	●	●	●	●	●
6	●	●	●	●	●
7	●	●	●	●	●
8	●	●	●	●	●

Labels: RJ-45, RJ-11, 1394, USB, BNC, SIG 1-8, Cross, No Connection

